



TOWEREZ™ FREE STANDING

DOWNLOAD FULL VERSION FROM RACKSUPPLIER.CO.UK


BOX SET

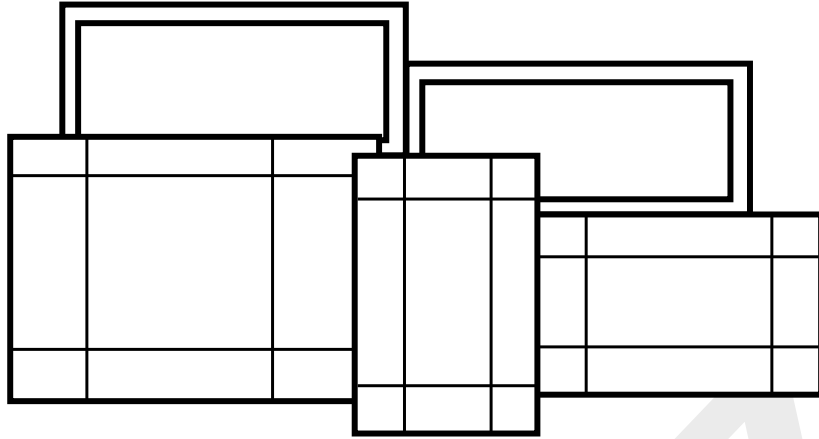


BOX I

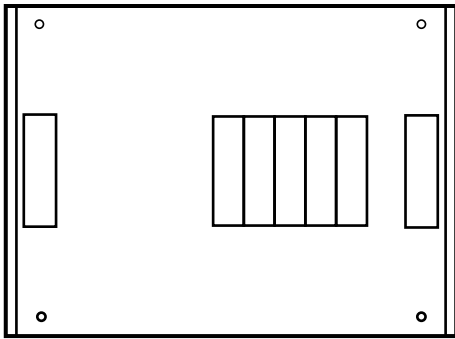


TOP COVER

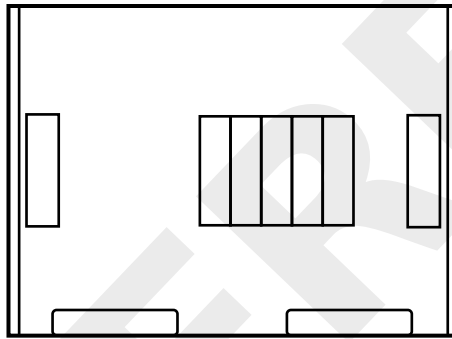


BOTTOM COVER

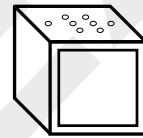

BLACK BLOCKS
(JUST 800 VERSION)

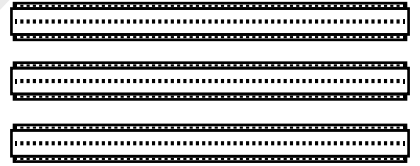

2 (LESS THAN 32U) OR 3 PAIR RAILS (+32U)

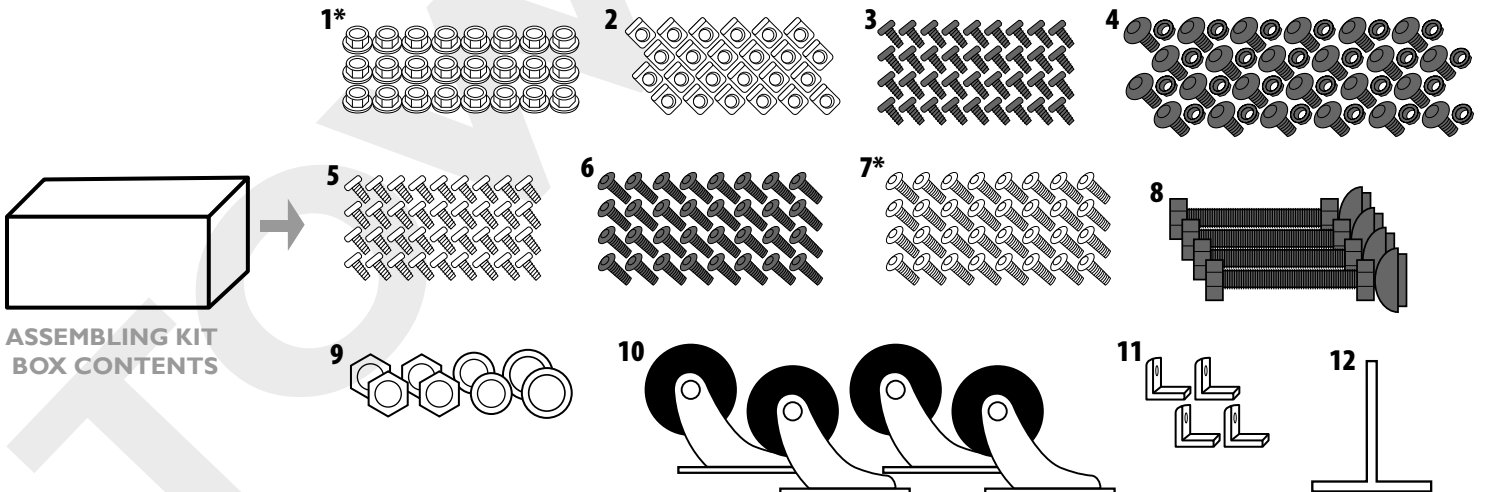


ASSEMBLING KIT
BOX CONTENTS


* USED ON THE 800 VERSION ONLY

BOX 2 AND 3

1X FRAME IN EACH BOX (2 FRAMES IN TOTAL)

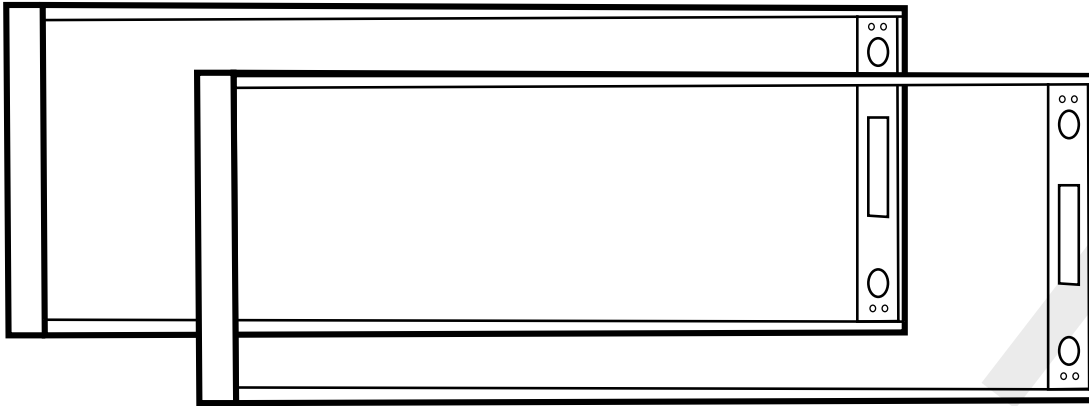


2X SILVER RAILS IN EACH BOX (4 RAILS IN TOTAL)




BOX 4

2x DOORS
(GLASS OR MESH)

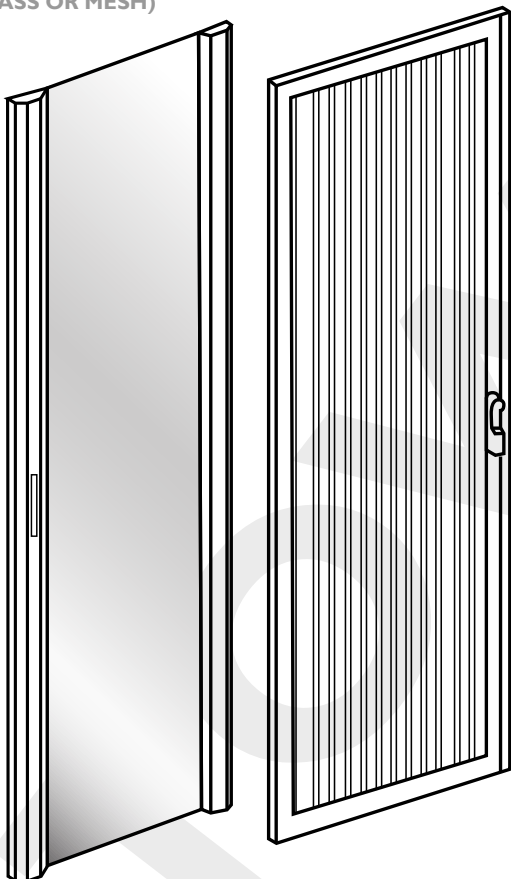


BOX 5

2X SIDE PANELS

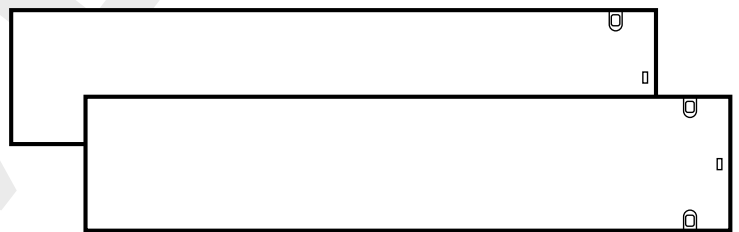



BOX 6

2X CABLE MANAGEMENT (800 WIDE VERSION)



STEP 1


LAY DOWN THE BOTH FRAMES FROM BOX 2 AND 3

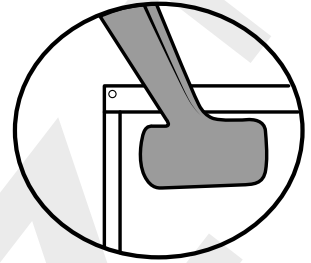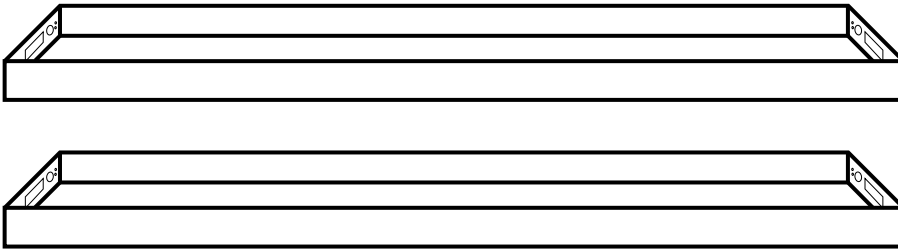


NOTE: YOU MIGHT NEED TO BANG THE CORNERS OUT IN THE TOP AND BOTTOM FRAMES

STEP 2


ATTACH TOP AND BOTTOM COVER TO FRAMES

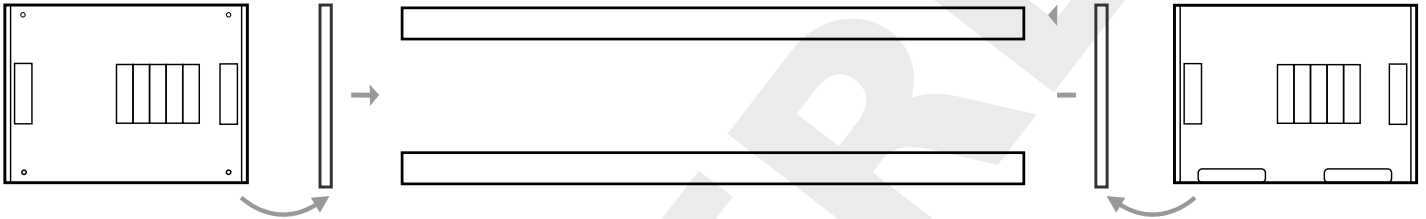

STEP 3

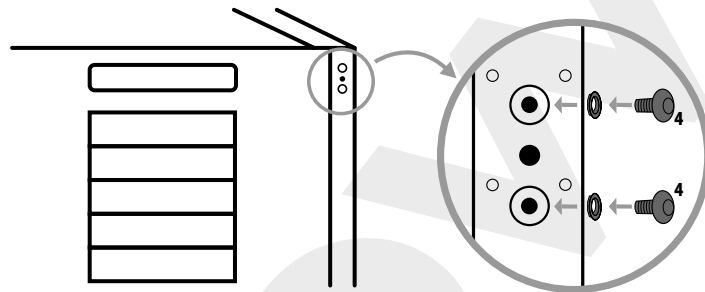


USE 8 SCREWS FOR THE TOP COVER AND 8 FOR BOTTOM COVER

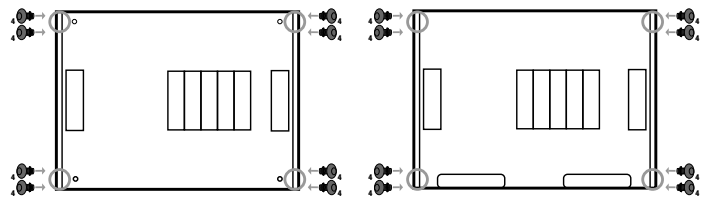



STEP 4

FOR 800 WIDE VERSION USE THE BLOCKS FIRST

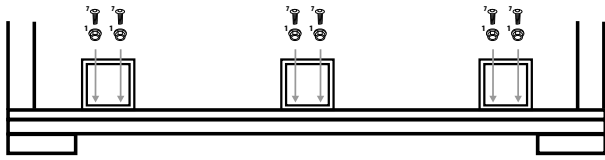

REPEAT THIS PRODEDURE FOR BOTH SIDES, TOP AND BOTTOM, 12 BLOCK IN TOTAL



PUT THE VERTICAL RAILS OVER THE BLOCKS

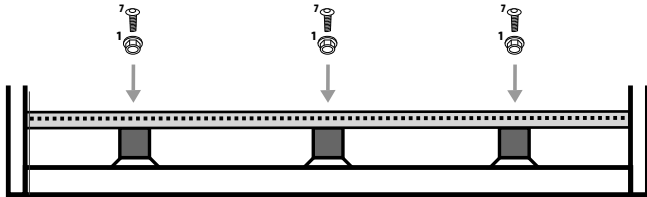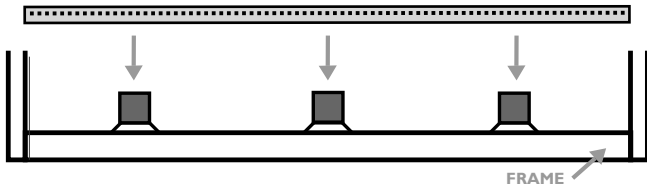


REPEAT THIS PRODEDURE 4 TIMES, 4 VERTICAL RAILS IN TOTAL

ON THE 600 WIDE VERSION ATTACH THE HORIZONTAL RAILS

ATTACH THE SILVER RAILS, 2 OR 3 EACH SIDE, INSIDE THE STRUCTURE

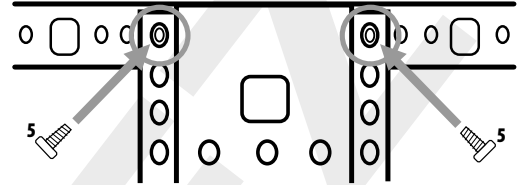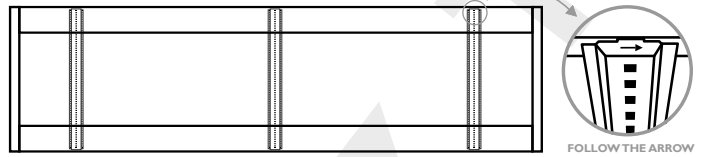

PUT THE VERTICAL RAILS OVER THE HORIZONTAL RAILS

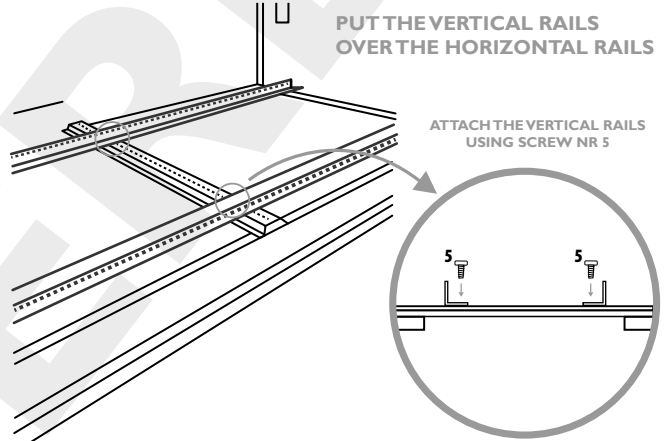


ATTACH THE VERTICAL RAILS USING SCREW NR 5


REPEAT THIS PRODEDURE 4 TIMES, 4 VERTICAL RAILS IN TOTAL

IN THE END, THE FRONT AND BACK SIDE WILL LOOK LIKE THIS


800 WIDE VERSION

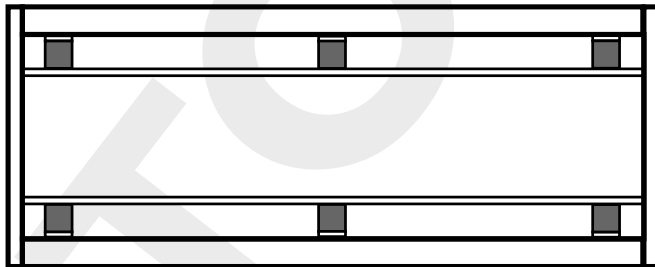



600 WIDE VERSION

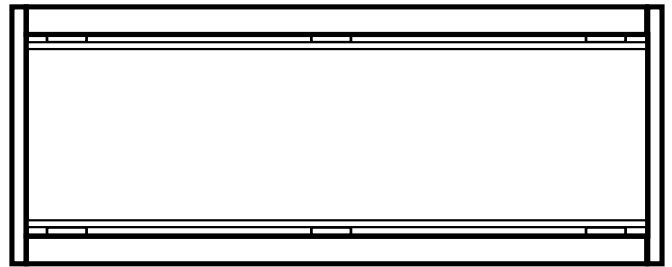


STEP 5

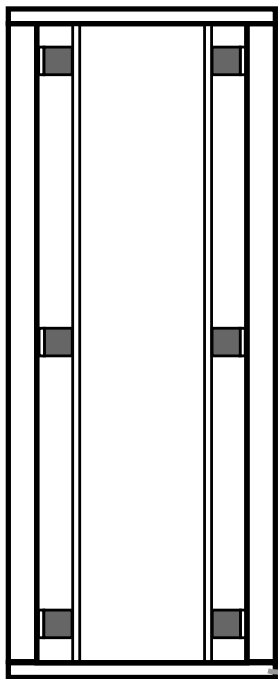

IF YOU NEED TO ELEVATE THE DOOR YOU CAN USE THE HINGES NUMBER 9 AND PLACE THEM ON THE BOTTOM BOLT

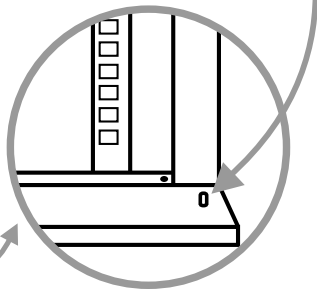


PULL THE BOLT DOWNWARDS TO INSTALL THE DOOR

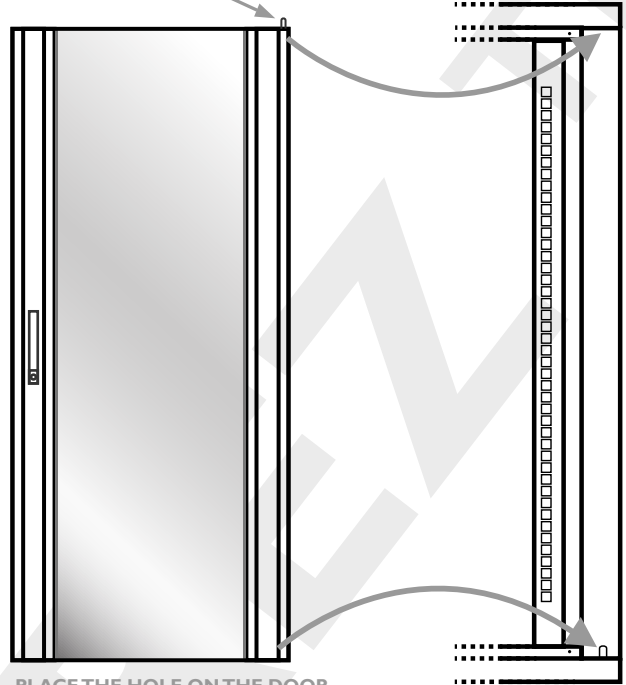


PLACE THE HOLE ON THE DOOR INSIDE THE BOTTOM BOLT

STEP 6

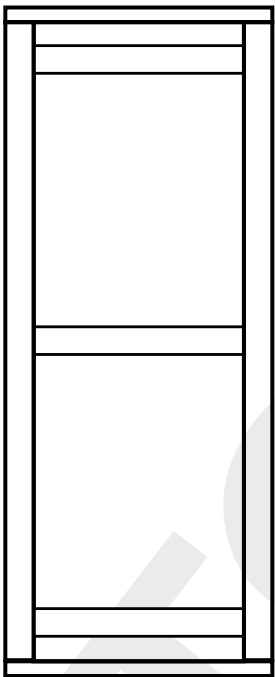


SIDEVIEW

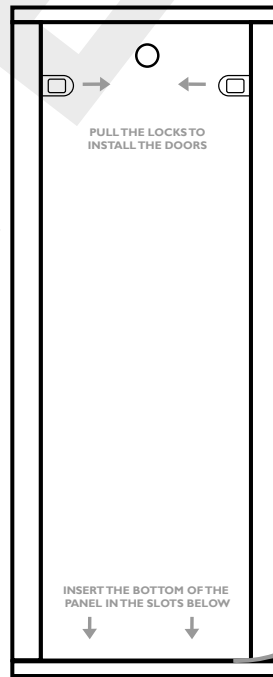


REPEAT THIS ACTION FOR THE OTHER SIDE

PULL THE LOCKS TO INSTALL THE DOORS


INSERT THE BOTTOM OF THE PANEL IN THE SLOTS BELOW

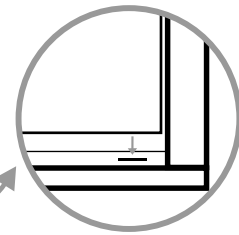

STEP 7

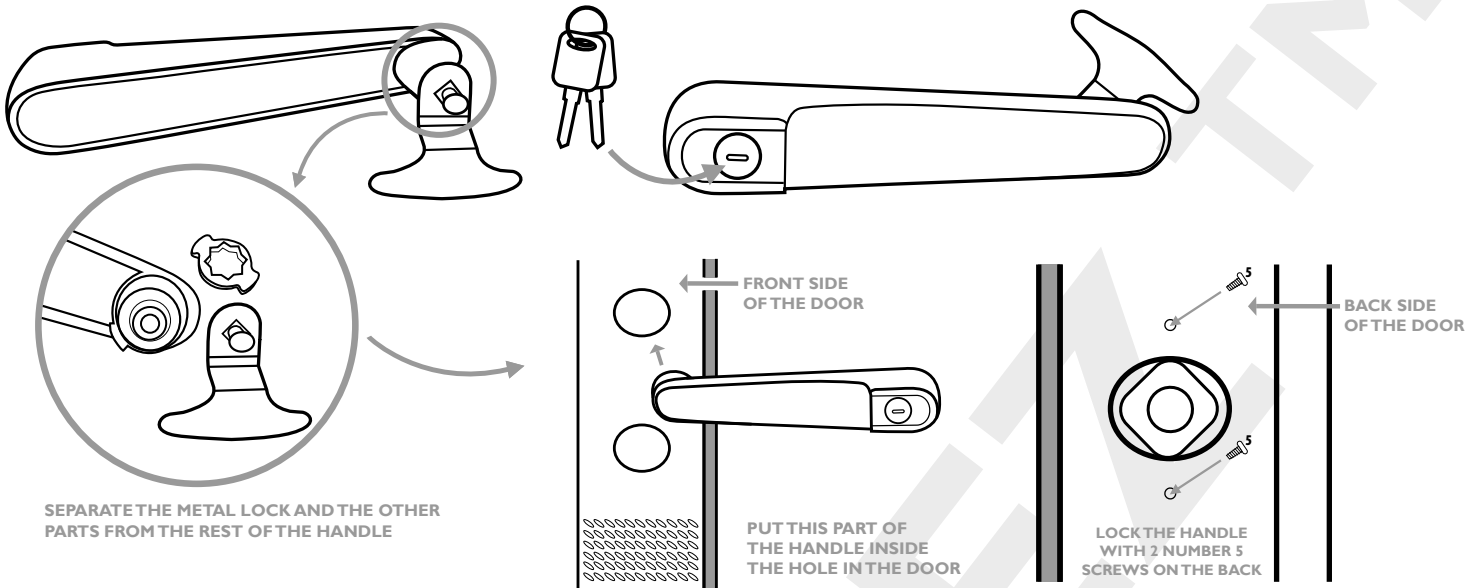

STEP 8

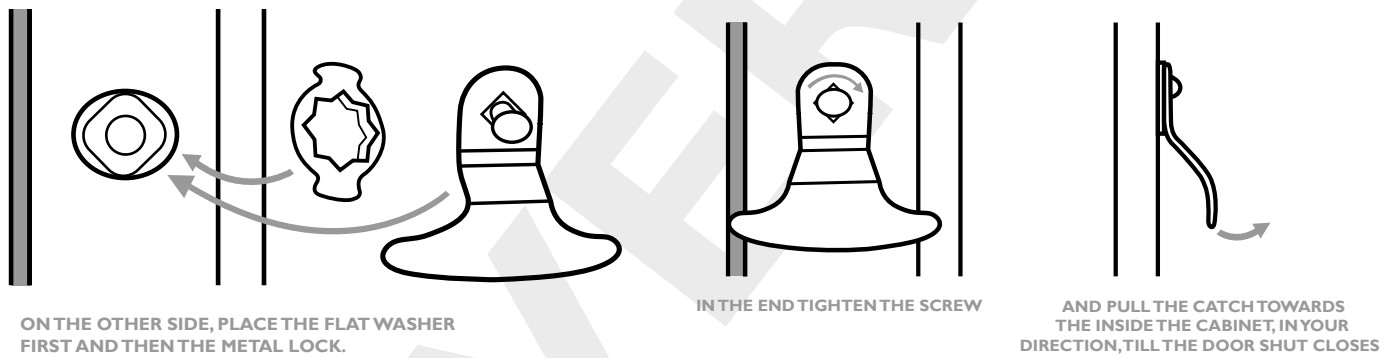

STEP 9

IN THE END YOU CAN ATTACH THE 4x WHEELS OR 4x ADJUSTMENT FEET ON THE BOTTOM COVER

